


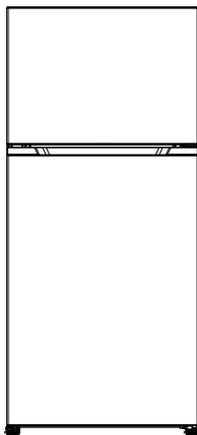

TOP MOUNT REFRIGERATOR FREEZER

CCR1800G/CCR2000G



1. READ these instructions carefully before installing and operating the appliance. Keep them for further reference.
2. Record in the space below the "SERIAL/MODEL NUMBER" found on the back or bottom of your appliance and retain this information for future reference.

SERIAL NUMBER:

MODEL NUMBER:

DATE OF PURCHASE:

Save and staple your sales receipt to your manual for warranty coverage.

CONTENTS

SAFETY INFORMATION

Important Safety Instructions.....	4-5
Refrigerant.....	5
Grounding Instructions.....	6-7

SET UP & USE

Parts & features	8
Food storage	9
Freezer compartment.....	9
Reverse and install the doors.....	10-11
Setting the temperature.....	11
Ice maker ready.....	11

CLEANING & CARE

Maintenance.....	12
Vacation and moving care.....	12
Eergy saving tips.....	12
Defrost.....	12
Disconnecting the appliance.....	13
User notifications.....	13

TROUBLESHOOTING & WARRANTY

Before you call for service.....	14
Customer service.....	14
Led indicator chart.....	15
Common troubleshooting / Non-Malfunctions	15
Troubleshooting	16
Limited warranty.....	17

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury:

READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT

1. Use this appliance only for its intended purpose as described in this use and care guide.
2. This refrigerator must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
3. Never unplug your refrigerator by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
4. Do not operate any appliance with a damaged cord or plug. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
5. Unplug your refrigerator before cleaning or before making any repairs.
NOTE: If for any reason this product requires service, we strongly recommend that a certified technician performs the service. Component parts shall be replaced with like components and servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
6. Do not use any electrical device or any sharp instrument in defrosting your refrigerator.
7. After your refrigerator is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
8. Do not refreeze foods that have been thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No. 69 reads: "...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold-below 40°F.
"...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it. The food may be dangerous to eat ... Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of its eating quality as you can."

SAFETY INFORMATION

9. This refrigerator should not be recessed or built-in in an enclosed cabinet. It is freestanding installation only.
10. Do not operate your refrigerator in the presence of explosive fumes.
11. Keep ventilation openings, in the appliance or enclosure or in the built-in structure, clear of obstruction.
12. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
13. Do not use electrical appliances inside the food storage compartments
14. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
16. This appliance is intended to be used in household or similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; catering and similar non-retail applications.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

DANGER

Risk of child entrapment. Before you throw away your old refrigerator or freezer, take off the doors. Leave the shelves in place so that children may not easily climb inside.

REFRIGERANT

GAS WARNINGS

-  **DANGER** - Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing.
-  **DANGER** - Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. DO NOT puncture refrigerant tubing.
-  **CAUTION** - Risk of fire or explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.
-  **CAUTION** - Risk of fire or explosion. Dispose of properly in accordance with federal or local regulations. Flammable refrigerant used.
-  **CAUTION** - Risk of fire or explosion due to puncture of refrigerant tubing; Follow handling instructions carefully. Flammable refrigerant used.

SAFETY INFORMATION

GROUNDING INSTRUCTIONS

ELECTRICAL REQUIREMENTS

The electrical requirements are a 115 volt 60 Hz, AC only, 15 amp. It is recommended that a separate circuit serving only the product be provided. The product is equipped with a 3-wire cord having a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. The cord provided with this appliance is equipped with a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Avoid the use of three prong adapters or cutting off the third grounding prong in order to accommodate a two prong outlet. This is a dangerous practice since it provides no effective grounding for the refrigerator and may result in shock hazard.

WARNING

Improper use of the grounding plug can result
in a risk of electric shock.

Consult a qualified electrician or serviceman if:

- 1) The grounding instructions are not completely understood.
- 2) You are unsure that the appliance is properly grounded.
- 3) You have any questions about the grounding or electrical instructions.

POWER SUPPLY CORD

Avoid the use of an extension cord because of potential safety hazards under certain conditions. Have a qualified electrician or serviceman install an outlet near the appliance.

If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.

SAFETY INFORMATION

USE OF EXTENSION CORDS WITH REFRIGERATORS

Only use a grounded extension cord that is rated at least 15 amps and has a third-wire ground. When a long extension cord is used to connect the refrigerator, a voltage drop occurs. The longer the cord, the greater the voltage drop. This results in less voltage being supplied to the refrigerator and increases the amount of current (amp) draw or reduces performance. A heavier cord with a larger wire size will reduce the voltage drop. Be sure to choose a cord that will supply enough voltage to operate the refrigerator. The table below indicates appropriate gauge for extension cords.

Minimum Gauge for Cord Sets						
Ampere Rating		Volts	Total Length of Cord in Feet (meters)			
		120V	25(7.6)	50(15.2)	100(30.5)	150(45.7)
		240V	50(15.2)	100(30.5)	200(61.0)	300(91.4)
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	


 **WARNING:** Keep electrical cords in good condition. Do not use worn, bare, or frayed cords because they can cause electrical shock.

 **WARNING:** Operating equipment at low voltage can cause it to overheat. Using an excessively long extension cord can cause the cord to overheat.

NOTE: Neither BLACK+DECKER nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SET UP & USE

PARTS & FEATURES

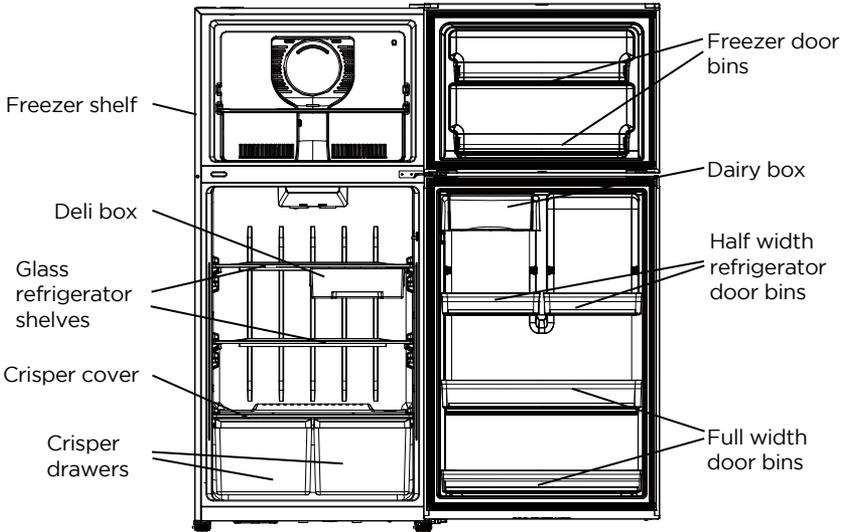

SET UP & USE

FOOD STORAGE

When storing fresh food that is not prepackaged, be sure to wrap or store food in airtight and moisture proof material unless otherwise noted. This will ensure proper shelf life and prevent the transfer of odors and tastes.

- Wipe containers before storing to avoid needless spills.
- Eggs should be stored in an upright position in their original carton to maximize shelf life.
- Fruit should be washed and dried, then stored in sealed plastic bags before storing in the refrigerator.
- Vegetables with skins should be stored in plastic bags or containers
- Leafy vegetables should be washed and drained and then stored in plastic bags or containers.
- Hot food should be allowed to cool before storing. This will prevent unnecessary energy use.
- Fresh seafoods should be used the same day as purchased
- When storing meats in the fresh food section, keep the original packaging or rewrap as necessary.

FREEZER COMPARTMENT

Follow the suggestions below for safe storage:

TYPE OF MEAT	STORAGE
Chicken	1-2 Days
Ground Beef	1-2 Days
Cold Cuts	3-5 Days
Steak/Roast	3-5 Days
Smoked/Cured Meat	7-10 Days
All Others	1-2 Days

- Foods frozen in this compartment must be consumed within 5 days after storage. This compartment is not cold enough for long term storage.
- To release frozen ice cube tray from the bottom of the compartment, pour warm water around it. Boiling water should not be used as it can damaged the interior cabinet. Metal objects, such as, screwdrivers or sharp knives can damage and puncture the cooling system tubing. Do not wash the ice cube tray in a dishwasher; only wash in lukewarm water.

SET UP & USE

REVERSE AND INSTALL THE DOORS

You can choose to open your refrigerator by the right side or the left side. To change the way of opening, please follow the instructions below.

Important safety warning: before doing so please unplug and disconnect the appliance.

In addition to the accessories packed, you will need:



Medium-sized Phillips screwdriver





Small-sized Flat-head screwdriver




Allen wrench

1. First, check to make sure the power is disconnected.

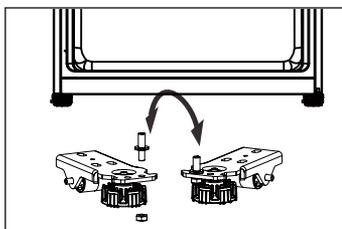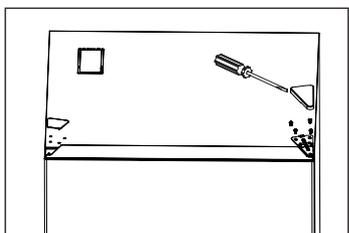


2. Remove top hinge cover and hinge hole cover, and remove the bolts that secure top hinge, and check it carefully before moving.
3. Remove freezer door.

7. Remove the hinge shaft from the bottom hinge and install it onto the hinge on the other side.
8. Install the middle hinge, screw hole plug, and screws on the outer box to the other side of the original position.

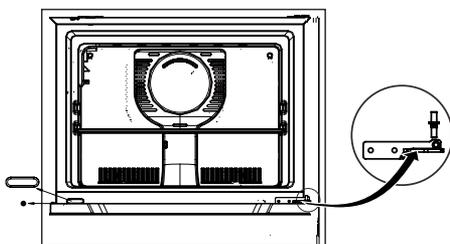


4. Use an Allen wrench to unscrew the hinge shaft on the middle hinge.
5. Remove the screw hole plugs on the middle hinge and middle beam, and remove the screws on the outer box hole.
6. Remove the fridge door.

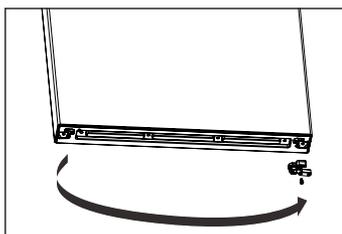

9. Remove the door closer and stopper at the bottom of the fridge door and install them on the other side.

SET UP & USE

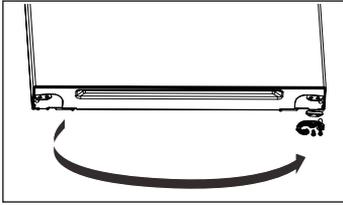


10. Remove the door closer and stopper at the bottom of the freezer door, and install the stopper and the left door closer to the other side of the freezer door. **NOTE:** parts needed are in the included plastic bag.

WARNING

WARNING! Do not use any electronic equipment inside the appliance.

SETTING THE TEMPERATURE

The temperature of refrigerator and freezer compartment can be controlled individually. The REF button controls the refrigerator temperature and the FRZ button controls the freezer temperature. Please note, the number shown on the display does not directly represent the temperature. The larger the number, the lower the interior temperature will be. 1 is a COLD setting and 5 is the COLDEST setting. When first starting your refrigerator, set both the refrigerator and freezer control to the middle setting (number 3) for 24 hours. If a colder temperature is required, push the necessary REF or FRZ button to a colder temperature (4 or 5). Each time the button is pressed, the temperature will cycle through each setting.

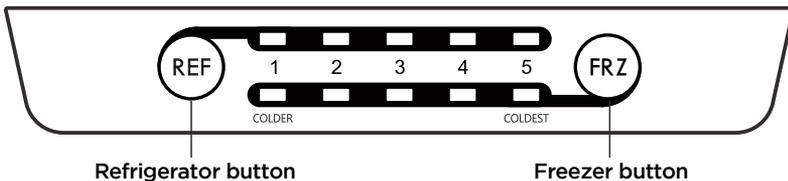

Refrigerator button

Freezer button

ICE MAKER READY

This refrigerator is equipped to accept an ice maker as an after market installation by a trained service technician. For further information, please contact the Customer Service Department.

CLEANING AND CARE

MAINTENANCE

The appliance should be maintained and cleaned frequently. For your safety, please pull the plug out of the socket before the cleaning.

1. Interior maintenance.

Clean the interior of the appliance with clean water or neutral cleaning agent. Scour with clean water and wipe it with a piece of dry cloth.

2. Door Gasket.

Clean door gaskets every three months according to general instructions. Gasket must be kept clean and pliable to assure a proper seal.

- Petroleum jelly applied lightly on the hinge sides of gaskets will keep the gasket pliable and ensure a good seal.

3. Exterior maintenance.

Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft doth, dampened with the cleaning solution to wipe down your refrigerator.

- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads.

Some of these chemicals may dissolve, damage and/or discolor your refrigerator.

VACATION AND MOVING CARE

- When going on vacation, it is best that you empty all the food from your refrigerator and freezer. Unplug the refrigerator, Clean the unit as per “MAINTENANCE section listed above” and leave the door open to remove any odors.

When travelling or moving the refrigerator, always transport the unit vertically. Moving the unit on its sides may damage the refrigerator and/or its compressor.

ENERGY SAVING TIPS

- The refrigerator should be located in the coolest area of the room, away from heat-producing appliances or heating ducts, and out of direct sunlight.
- Let hot foods cool to room temperature before placing in the refrigerator. Overloading the refrigerator forces the compressor to run longer and thus increase energy consumption. Foods that refrigerate too slowly may lose quality or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing in the refrigerator.
- The shelves should not be lined with aluminium foil, wax paper, or paper towels. This will interfere with cold air circulation, making the refrigerator less efficient.
- Organize food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

DEFROST

Defrost of refrigerator will be executed automatically, there is no need for manual defrost. The defrost water flows into the vaporization plate and will be vaporized by the heat of compressor, so the drain tube must be kept clean.

CLEANING AND CARE

WARNING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer

DISCONNECTING THE APPLIANCE

After power failure, even in summer, the refrigerator can store food normally for several hours.

1. Discontinuation during power failure.

After power failure, do not put additional food in the appliance and reduce the frequency of door opening. Place bags of ice in the top portion of the refrigerator.

2. Discontinuation during vacation.

Discard any food that will spoil while you are away and close the door firmly. If it is an extended vacation, empty the refrigerator and unplug the appliance. After defrosting, clean the liner of the appliance and wipe dry, and leave the door open.

3. Unused.

If the refrigerator will be unused for a long time, please unplug the outlet and clean the appliance. The door should be kept open in order to prevent unpleasant smell.

Attention

After unplugging the power, please leave at least 5 minutes before resuming operation.

USER NOTIFICATIONS

1. Do not splash water on the refrigerator, as it will cause oxidation and malfunction. Electronic components such as on/off button should be wiped dry.
2. Cleansers such as soap powder, abrasive cleaning powder, alkali, cleansers, chemical cloth, thinner, alcohol, acid petroleum product and hot water should not be used to clean the refrigerator as they may damage the painted cover and plastics.
3. Spills and stains can damage the interior. Please clean as soon as possible.
4. Please check the points below after maintenance:
 - (1) Is there any damage or loss of the electronics.
 - (2) Can the plug be put in the socket reliably.
 - (3) Is the plug overheating.

WARNING

Please get rid of the gasket of the door before disposal.
The disposal of refrigerator should be handled by professionals as it may be harmful to the environment.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE UNIT FAILS TO OPERATE:

- A) Check to make sure that the unit is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE PRODUCT YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE RETAILER

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at (855)855-0294 or service@appliance.com.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING & WARRANTY

LED INDICATOR CHART

No	Defect	LED1-LED 5	Position	Description
1	Ambient Temperature Sensor Failure	●●○○○	Refrigeration indicator light	Indicated LEDs will flash intermittently at 0.5 second intervals
2	Refrigeration Sensor Failure	○○●○○		
3	Communication Failure	●●●●○		
4	Refrigerator Door Alarm	●●●○○		
5	Freeze Sensor Failure	○○●○○	Freeze indicator light	
6	Defrost Sensor Failure	●●○○○		
7	Fan Failure	●●●●○		
8	Overheating Failure	●○○○○ ○○●○○ ○○●○○ ○○○●○ ○○○○●	Refrigeration or Freeze indicator light	One of Indicated LEDs will flash intermittently at 0.5 second intervals; If refrigeration indicator light flashes, it means the refrigeration is overheated; If the freezer light flashes, It means that the freezer is overheated.

Common Troubleshooting / Non-Malfunctions

1. Moisture may form dew on the exterior of the product during humid seasons, simply wipe clean as discussed in CLEANING AND CARE section.
2. The flow of refrigerant through the pipeline coil can cause clicking and noisy operation.
3. Warm or hot refrigerator sides are a result of cooling pipeline operating. This is normal.
4. The frame of the refrigerator may be warm during operation due to the defrost pipeline inside. This is normal.

Please check the points above first.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TROUBLESHOOTING & WARRANTY

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the refrigerator still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Refrigerator does not work	<ul style="list-style-type: none"> A. Refrigerator is not switched on B. Unit is not plugged in or is loose C. Fuse has blown or is defective D. Wall power socket is defective 	<ul style="list-style-type: none"> A. Turn on the temperature control dial. It may be in the OFF, "0" position B. Plug in the refrigerator C. Check fuse, replace if necessary D. To be corrected by a qualified electrician
The food is too cold	<ul style="list-style-type: none"> A. Temperature is not properly adjusted 	<ul style="list-style-type: none"> A. Set the temperature control dial to a warmer setting
The food is too warm	<ul style="list-style-type: none"> A. Temperature is not properly adjusted B. Door was open for an extended period C. A large quantity of warm food was placed in the refrigerator within the last 24 hours D. The refrigerator is near a heat source 	<ul style="list-style-type: none"> A. Set the temperature control dial to a cooler setting B. Open the door only as long as necessary. Check door gasket for proper seal C. Set the temperature control dial to a colder setting temporarily D. Please look in the "Protection From Heat and Moisture" section
Heavy build-up of frost, possibly also on the door seal NOTE: This is normal during high humidity periods. Frequent door openings will also cause heavy frost buildup	<ul style="list-style-type: none"> A. Door seal is not air-tight (possibly after reversing the door) 	<ul style="list-style-type: none"> A. Carefully warm the leaking sections of the door gasket with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand such that it sits correctly
Popping or cracking sounds	<ul style="list-style-type: none"> A. When compressor comes on 	<ul style="list-style-type: none"> A. This is a normal sound of coolant flowing through condenser coils
Refrigerator door does not shut properly	<ul style="list-style-type: none"> A. The refrigerator door is not properly aligned B. Possible blockage from food containers, shelves, bins, etc. 	<ul style="list-style-type: none"> A. Re-align the refrigerator door. Refer to the "Door Alignment" section B. Ensure nothing is blocking the door
Refrigerator has an odor	<ul style="list-style-type: none"> A. Foods not properly sealed B. Interior needs cleaning 	<ul style="list-style-type: none"> A. Removed any contaminated foods B. Please refer to "Cleaning and Care" section

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/and a total of 5 years (60 months) for compressor part only.**

W Appliance agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply if any of the following conditions exist:

1. If the appearance or exterior of the product has been damaged or defaced, or altered or modified in either design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to a power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents, or acts of God.
5. If repair attempts are done by unauthorized service agents; use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To product was used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.
13. Service calls to repair or replace the house fuse, reset a circuit breaker, or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W APPLIANCE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance. W Appliance reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at 1-855-855-0294.

W Appliance Co.
1356 Broadway
New York, NY 10018



© 2024 Commercial Cool is a W Appliance Company.
All Rights Reserved.